

MAXIMUM WEIGHT 2000 KG
THE SYSTEM SHOULD BE ACTIVATED ONLY BY
AUTHORISED OPERATORS
THE SYSTEM SHOULD NOT BE
ACTIVATED BY MINORS

BEWARE PRIOR TO OPERATION

1. IT IS THE USERS RESPONSIBILITY TO CHECK THE VEHICLE CLEARANCE ON AND AROUND CAR STACKER SYSTEM THAT THERE ARE NO CLASHES AND THEIR VEHICLE IS SUITABLE.
2. IF IT IS YOUR FIRST TIME PARKING, OBTAIN ASSISTANCE FROM ANOTHER PERSON TO PROVIDE YOU DIRECTIONS.
3. APPROACH THE SYSTEM IN LOW GEAR, SLOWLY, AND ALWAYS DRIVING FORWARD.
4. ANY LUGGAGE /EQUIPMENT SHOULD BE REMOVED FROM CAR ROOF.
5. BEWARE OF RADIO / MOBILE PHONE ANTENNAS.
6. MAKE SURE THE BOTTOM CAR IS PARKED CORRECTLY.

OPERATION INSTRUCTIONS

DRIVING IN:

1. STOP THE CAR.
2. **MAKE SURE NO PEOPLE OR OBSTACLES ARE BEHIND THE SYSTEM.**
3. USE KEY TO ACTIVATE SWITCH TO THE RIGHT.
4. ROTATE TO DOWN (ARROW ↓) POSITION.
5. DRIVE CAREFULLY ON TOP OF THE LIFTING PLATFORM. WHEN DRIVING ONTO PLATFORM CHECK VEHICLE CLEARANCE ON AND AROUND CAR STACKER SYSTEM THAT THERE ARE NO CLASHES AND YOUR VEHICLE IS SUITABLE. MAKE SURE ALL WHEELS ARE IN CORRECT POSITION. TURN OFF THE CAR MOTOR - ACTIVATE THE HAND BRAKE.
6. USE KEY SWITCH TO ROTATE TO UP (ARROW ↑) POSITION.
7. MAKE SURE THE DRIVE ON RAMPS ARE IN THE UP POSITION.
8. AT END OF OPERATION RELEASE THE SWITCH.
9. ROTATE KEY TO LEFT AND REMOVE.

DRIVING OUT

1. **MAKE SURE NO PEOPLE OR OBSTACLES BEHIND THE SYSTEM.**
2. USE KEY TO ACTIVATE SWITCH TO THE RIGHT.
3. ROTATE TO DOWN (ARROW ↓) POSITION.
4. MAKE SURE THE DRIVE ON RAMPS ARE IN THE DOWN POSITION
5. DRIVE CAREFULLY FROM TOP OF THE PLATFORM.
6. USE KEY TO ROTATE TO UP (ARROW ↑) POSITION
7. AT END OF OPERATION RELEASE THE SWITCH.

SAFETY INSTRUCTIONS

THE SYSTEM SHOULD BE ACTIVATED ONLY BY AUTHORISED OPERATORS!

1. THE MAXIMUM CAR WEIGHT SHOULD BE UP TO 2000 KG ONLY.
2. IN CASE OF DANGER PUSH IMMEDIATELY THE **RED EMERGENCY STOP BUTTON.**
3. TOP CAR MAXIMUM DIMENSIONS: HEIGHT **, WIDTH 2.0 M, LENGTH 4.9m
** Depends on the clear ceiling height (For top car 1.5m, minimum ceiling height required is 3.4m)
4. BOTTOM CAR MAXIMUM DIMENSIONS: HEIGHT 1.50 M, WIDTH 2.0 M, LENGTH 4.9 M.
5. NO PERSON SHOULD BE IN CAR WHILE LIFTING THE DEVICE
6. THE DEVICE SHOULD NOT BE ACTIVATED IF ANY OBSTACLES AROUND IT.
7. ENSURE THE CAR IS STABLE AND IN EQUILIBRIUM DURING LIFTING.
8. CLIMBING TO THE TOP PLATFORM IS PROHIBITED.
9. ATTENDANCE TO CARS ON SYSTEM IS PROHIBITED.
10. AFTER OPERATION REMOVE THE KEY.
11. SECURE THE CAR USING THE HAND BRAKE.
12. NO CHILDREN ALLOWED IN THE PARKING AREA.
13. BEWARE OF BUMPING HEAD WHILE APPROACHING THE LOWER CAR.
14. PARKING ON BOTTOM SPACE IS ALLOWED ONLY IF SYSTEM IS NOT IN MOTION.

ATTENTION

DURING MAINTENANCE:

1. SHUT DOWN MAIN SWITCH.
2. ARRANGEMENTS SHOULD BE PERFORMED ONLY BY QUALIFIED AND APPROVED CSI TECHNICIAN.
3. GENERAL INSPECTION IS MANDATORY EVERY 6 MONTHS.

FOR SERVICE CALL: 1800 069 784